

Panel assembly without sand/mortar filler joints - Panespol

(For filler code: MA-002)

01



Using a circular saw or jigsaw cut the end of the panel to begin cladding the wall from one end.

TIP: Cut the panel face down for the best finish

02



Apply adhesive to the back of the panel as a bead or blobs in a grid pattern.

ATTENTION: Ensure you use the correct adhesive for exterior applications.

03



Place the panel on the wall for fixing.

04



Screw through the panel to secure while the adhesive cures.

05




For masonry walls plastic expanding plugs and screws can be used to secure the panels.

06



Ensure the interlocking fingers on each panel are glued to the wall.

07

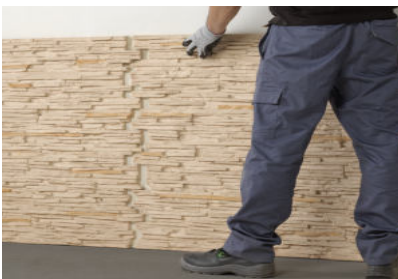

Place the next panel on the wall making sure the edge interlock fully seats.

08



Fill the interlocking joints with filler for a seamless look. Also fill any screw holes where the panel is fixed.

09



Spread filler with an artist brush to make the joint take correct visual texture and shape.

10



Let the filler dry for approximately 24 hours (depending on the temperature) and touch up joints and holes with correct colour paint using a small artist's brush.

11



Any colour accents can be applied using colour pigments if required.



www.advd.com.au/panespol-install/

View the installation videos on our website

PANESPOL®

Corner assembly without sand/mortar filler joints - Panespol

(For filler code: MA-002)

01



Place the panel in place on the wall where the corner is required. Draw a line down the back of the panel to mark where the mitre-joint will be cut. Using a circular saw or jigsaw cut the panel face-down at 45-degrees on the marked line.

02



Once the panels being used to form the corner are cut apply adhesive to the panels.

03



Place panels on the wall and fix to the wall on one side of the corner.

04



Apply adhesive bead onto the joint to glue both panels to each other.

05




Fit adjacent panel forming a tight corner bond and fix the panel to the wall. If necessary smooth out any irregularities on the mitre-joint with a file.

06




Once all the panels are in position fill any gaps, holes and screw holes with filler.

07

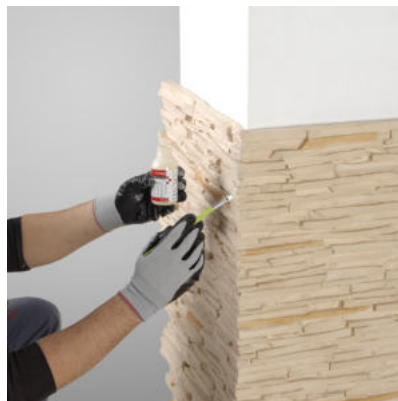

Let the filler dry then apply the correct colour paint touch-up to the corner.

08

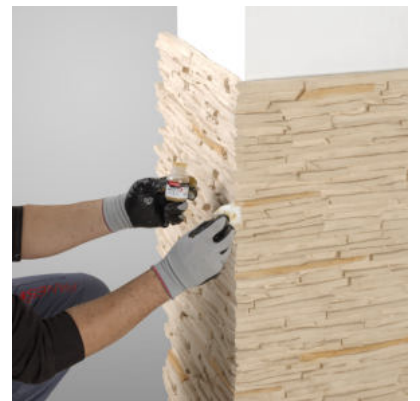

Finally, any areas that need colour accent or pigment can be touched up or added for a natural look.

